



Control Skype Levels by adjusting FX Send for Input 1 and 2 and input level for I3/4. FX Send must be down on I3/4 in order to eliminate echo for caller.

USB IF 2 only needed for recording Skype.

Mic 1	Mixer Input 1
Mic 2	Mixer Input 2
USB Interface 1 Input	Mixer Tape Output
USB Interface 1 Output	Mixer Tape Input
Skype Recording	
USB Interface 2 Input	Mixer FX Send
USB Interface 2 Output	Mixer 3 / 4 Input
Both USB Interfaces to PC	
Set Recording/Playback in Audacity to USB IF 1	
Set Recording/Mic in Skype to USB IF 2	



Spooktalkular Tech
Mixer Connections